


FV400

Assembly and Spares List

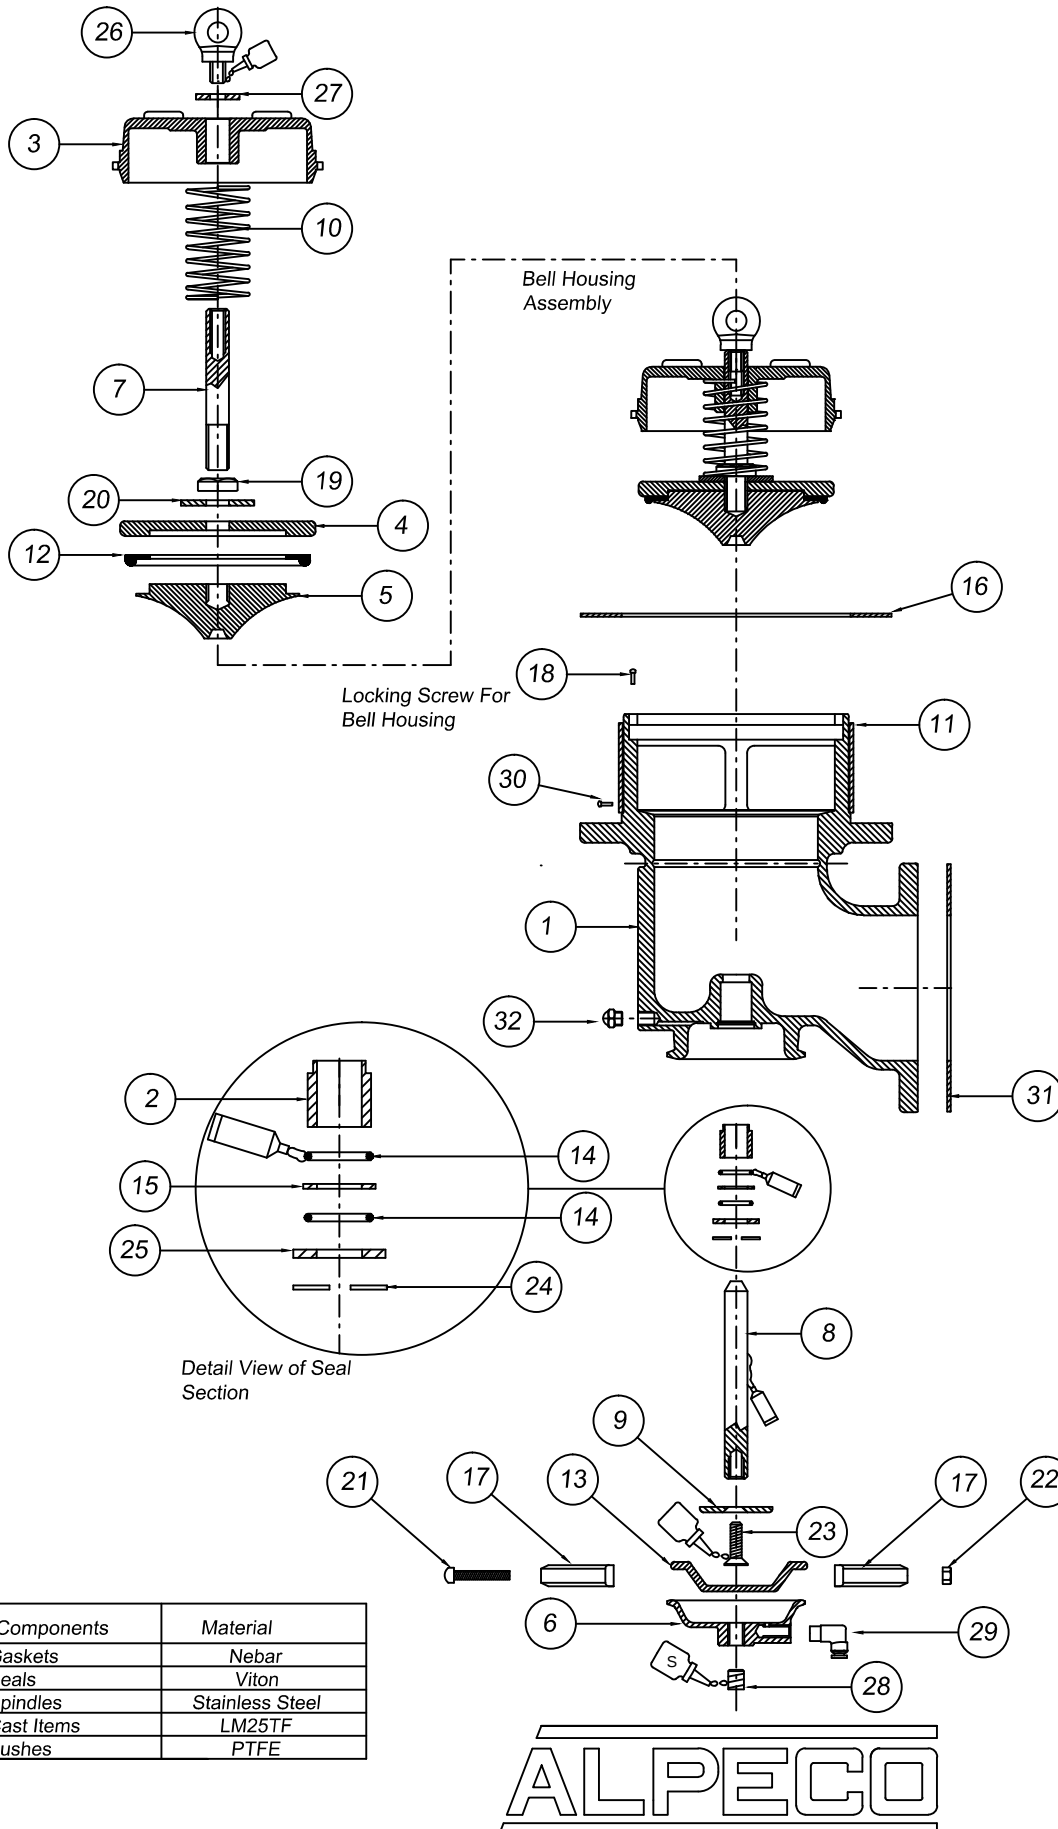

Components	Material
Gaskets	Nebar
Seals	Viton
Spindles	Stainless Steel
Cast Items	LM25TF
Bushes	PTFE

N ^o	Part Number	Qty
1	FV402BODY	1
2	BUS0010	1
3	FV400BHMC	1
4	FV400SHMC	1
5	FV400SRMC	1
6	DIA0005COVER	1
7	SPI0007	1
8	SPI1614	1
9	PIS0009	1
10	SPR0006	1
11	FV402GAUZE	1
12	SEA0011	1
13	DIA0012	1
14	SEA0013	2
15	WAS0014	1
16	GAS0018	1
17	VCL0016	2
18	SCR0606	1
19	NUT0021	1
20	WAS0022	1
21	SCR0026	2
22	NUT0027	2
23	SCR0023	1
24	CIR0025	1
25	WAS0024	1
26	BOL0028	1
27	WAS0030	1
28	PLU0031	1
29	AIR1783	1
30	PIN0137	2
31	GAS1646	1
32	AIR560	1

SPARES KIT FV400-SPK

N ^o	Part Number	Qty
12	SEA0011	1
13	DIA0012	1
14	SEA0013	2
15	WAS0014	1
24	CIR0025	1
25	WAS0024	1

KEY	
	THREAD LOCK (LOCTITE 242)
	GREASE (CENTURY LITMOL No2)
	THREAD SEALANT (LOCTITE 572)
	HAMMER